


**PRODUCT FACE**

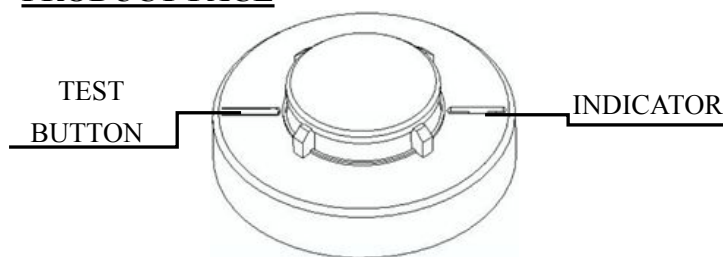

**PRODUCT INTRODUCTION**

This product named Photoelectric smoke detector (hereinafter called detector) detects the smoke by a couple of infrared diodes. The principle of detecting is granule in the smoke can reflect infrared light. Infrared diodes are placed in the special chamber. The chamber can shield external light, but doesn't affect the smoke into it. While there is no smoke, the diode can receive very weak infrared light. When the smoke entering the chamber, diode can receive more and more light, and the detector can give out alarm signal when the smoke attains the certain density. In order to reduce the interference and lower power consumption, the emitting circuit adopts the pulse signal. The product in accordance with the networking approach is divided into 2-wire and 4-wire detectors.

**TECHNICAL SPECIFICATION**


PRODUCT CATEGORY	2 wire	4wire
OPERATING VOLTAGE	DC9-35V	
STANDBY CURRENT	45uA@DC24V	≤200uA(relay N.O.) @DC24v ≤9mA(relay N.C.) @DC24v
ALARM CURRENT	40mA@DC24V	45mA(relay N.O.) 9mA(relay N.C.)
ALARM INDICATION	RED LED ON	
TEMPERATURE RANGE	-10℃~+50℃	
HUMIDITY	0%~95%RH(NO CONDENSATION)	
ALARM OUTPUT	Remote LED	RELAY OUTPUT
CONTACT RATING	N/A	100mA@DC 28V
SENSITIVITY	0.5dB/m(±0.1dB/m)	
STANDARD	EN54-7/UL268	
DIMENSION	100(diaMETER) * 42mm(deep)	

**Connection Description**


**1.2 wire smoke detectors** :base terminals “1” and“ 2” for DC power input , non-polarized.“1”for DC power positive pole or cathode input,“3” for DC power positive pole or cathode output.“4”for remote indicator cathode. When remote indicator is used “1” in must be connected to the positive line in .

**2.4 wire smoke detectors** : base terminals“ 1” and “2” for DC power input ,non-polarized .“3” for relay output com,“4” for relay output N.C. or N.O.

**WIRING DIAGRAM**

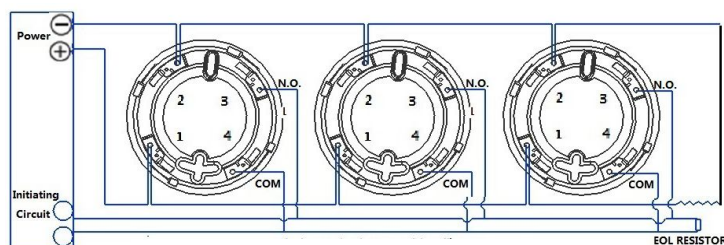

4 wire smoke detector wiring diagram

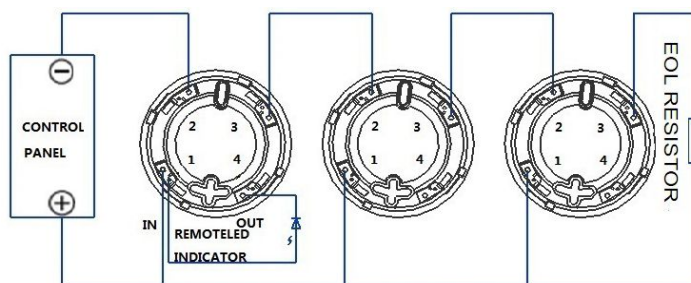

2 wire smoke detector wiring diagram

**NOTICE**

1. The detector can not be installed under worse environment. E.g. coldest, hottest, dusty, do not move away the dustproof cover until use the detector indeed.
2. Make sure that there is no block within 0.5m from detector.
3. Keep the distance between detector and wall more than 0.5m.
4. Make sure the distance between detectors be less than 15m. And the distance between detector and corner must be less than half of the one between detectors.
5. Horizontally install the detector. If have to be installed slantingly, please keep the angle less than 45 degrees)
6. Detectors base be installed solid, wire connections must be reliable.
7. Recommendations should be carried out every six months a simulated fire test, the test detectors are working properly.
8. For various reason, including, but not limited to changes in environmental conditions, electric disruptions and tampering, the product may not perform as expected. The user is advised to take all necessary precautions for his/her safety and the protection of his/her property.